



Design und Produktion:

stockwerk3 gmbh | Produktgestaltung | Balierstrasse 27 | CH-8500 Frauenfeld
T +41 (0)52 721 81 81 | F +41 (0)52 721 81 83 | info@stockwerk3.ch | www.stockwerk3.ch

«drom tilt» Floor Lamp Operating Instructions

1 Technical data

Total height: 1850 mm

Weight: approximately 8 kg

Mains supply: 230V~ 50Hz

Power: 22W

Lamp: 1x FL ring light (T5) 22W (e.g. OSRAM 6180 / 6181 / 6182)

2 Initial operation

- Only lift the lamp by the base for transportation and locating purposes (not by the chrome stand pole).
- Locate the lamp on an even surface so that lamp is standing safely.
- Plug in the mains plug into the mains wall socket.
- The lamp is switched on and off by pressing the round central element in the base.

3 Maintenance !Ensure the mains plug has been removed from the wall before carrying out any work on the lamp!

3.1 Cleaning

All outer parts of the lamp can be cleaned using a soft, moist cloth. Do not use any cleaning or scouring agents.

3.2 Adjusting the motion joints

It is possible to adjust the lamp joints as required.

3.2.1 Light screen joint

Carefully adjust the two screws (1) (refer to figure A) with an I-6 sided Allen key size no.2 until the original resistance is attained.

3.2.2 Base joint

- Place lamp on a step (e.g. stair, table edge or stool edge) with the indent facing forwards (refer to figure B). Take care to ensure that the lamp is standing safely.
- Rotate lamp until the turning joint is aligned with the indent (refer to figure C).
- Carefully adjust the two screws (2) with an I-6 sided Allen key size no.2 until the original resistance is attained. Keep hold of the lamp stand pole with one hand at all times when tightening the screws.
- Reposition lamp at its original location (only keep hold of the base).

3.3 Replacing the fluorescent tube !Ensure the mains plug has been removed from the wall before carrying out any work on the lamp!

Caution: Only use the fluorescent tubes listed under '1 Technical data'.

- Pull the fluorescent tube from the bracket (refer to figure D) ensuring to keep hold of the screen with one hand at the height of the bracket.
- Pull the fluorescent tube from the metal clamps.
- Push the fluorescent lamp tube base of the new lighting medium into the bracket until it locks into place.
- Push the fluorescent tube into the metal clamps until they latch.
- Insert the mains plug into wall socket.

4 Faults and remedies

Fault	Remedy	Chapter
-Lamp does not illuminate	-Check mains supply at the wall socket -control the fluorescent lamp tube base -Replace fluorescent tube	- 3.3 (c) 3.3
-Lamps tilts away after a certain angle of inclination	-Adjust base joint	3.2.
-Screen no longer remains in the desired position	-Adjust screen joint	3.2.1

Repairs are only to be carried out by the company stockwerk3 GmbH or by specialist staff authorised by stockwerk3 GmbH.

Design and Production:

stockwerk3 gmbh | Produktgestaltung | Bischoff Sigerist Wick | Balierstrasse 27 | CH-8500 Frauenfeld

T +41 (0)52 721 81 81 | F +41 (0)52 721 81 83 | info@stockwerk3.ch | www.stockwerk3.ch

